

Digital indicator with relay outputs PMS-920

- ✓ Current input 4...20 mA or 0...20 mA
- ✓ Voltage input 0...5V, 1...5V, 0...10V, 2...10V Pt100
- ✓ 2 or 4 settable relay outputs: 1 A, 250 V AC
- ✓ Power supply 85...260 v AC/DC
- ✓ Integrated power supply 24 V DC
- ✓ RS-485 output



Functions and use

Programmable indicator PMS-920 is applicable to cooperation with the transmitters having a standard current or voltage output signal. Two alarm values controlling the relay outputs can be programmed. Diodes on the front of the indicator indicate the exceeding of the alarm values. The relay outputs have a pair of operating contacts. The transmitter can be powered directly from the indicator with a built-in auxiliary 24 V DC supply unit.

PMS-920 meters enables the following parameters to be programmed:

- ◆ type of input signal: 4...20 mA or 0...20 mA,
0...5 V, 0...10 V, 1...5 V or 2...10 V,
- ◆ measured value display range and decimal point position;
- ◆ level and hysteresis of action of relays;
- ◆ state of contact during alarm;
- ◆ password restricting access to the programming menu;
- ◆ display filtering level.
- ◆ color of display (green or red).

Input signal

Technical data

4...20 mA or 0...20 mA,
0...5 V, 0...10 V, 1...5 V or 2...10 V

Display range

-999 to 9999

Display error

0,1% ± 1 digit

Relay outputs

2

special version 4

1 A, 250 V AC, cosφ=1
85...260V AC/DC

Power supply

Integrated power supply: 24 V DC stab., max. 100 mA

Operating temperature

-20...50°C

Storage temperature

-20...70°C

Display size:

LED 4x13mm

special version



LED 4x20mm (PMS-920/20)

Casing


panel type

IP 40 (from the front)

IP 20 (from the terminals)

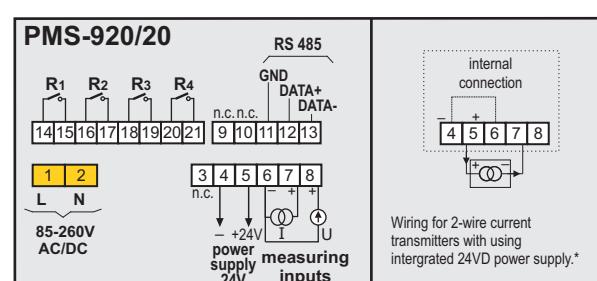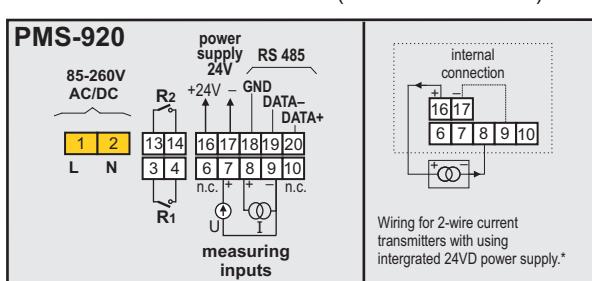

External dimensions

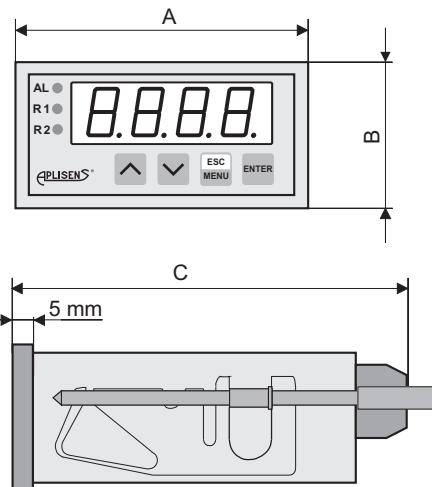

PMS-920

(A=72mm , B=36mm , C=100mm)
Dimensions of panel cut-out 67mm × 32,5mm

PMS-920/20

(A=96mm , B=48mm , C=100mm)
Dimensions of panel cut-out 90,5mm × 43mm

Ordering procedure

PMS-920/



Special version:

20 - display 4x20mm, casing 96x48x100mm

*Other ways of connecting current and voltage transmitters are given in the Operation Manual